


## VMP-stations Connection of External Equipment


Item Number	Item Name	Description
1020600315	VMP-503	MAIN STATION, WALL MOUNTED WITH LOUDSPEAKER, 26034 IP65
1020600305	VMP-530	MAIN STATION, WALL MOUNTED W/O LOUDSPEAKER 26033 IP65
3006202035	VMP-530VHM	MAIN STATION W/HANDMIC.in WT cabinet

### 1 External loudspeaker VMP-530, VMP-503

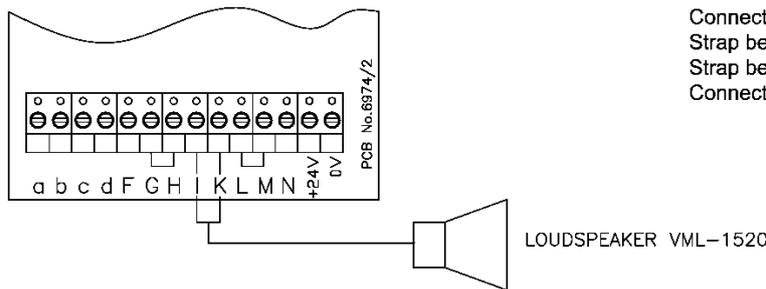


Connections:  
 Strap between G-H  
 Strap between L-M  
 Connect Loudspeaker to I-K


### 2 External loudspeaker VMP-530VHM

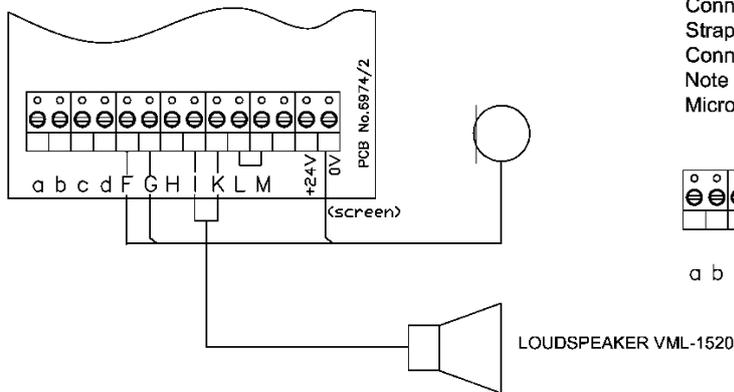

 
Connections:  
 Strap between L-M  
 Connect loudspeaker to I-K  
 Note !  
 Microphone, fixed connection



### 3 External loudspeaker, Headset & Handset VMP-530

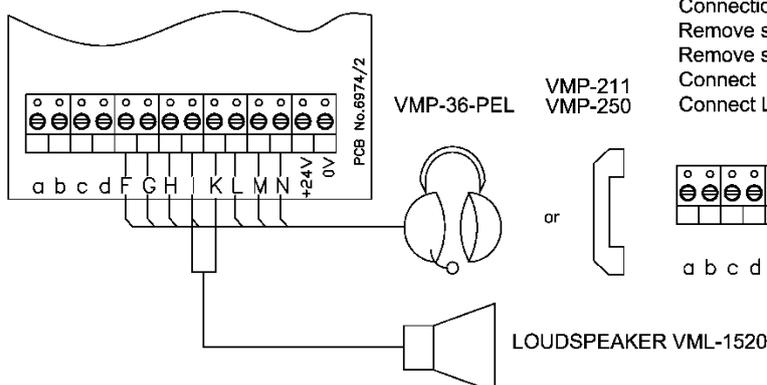


Connections:  
 Remove strap between G-H  
 Remove strap between L-M  
 Connect headset or handset to FGHI LMN  
 Connect Loudspeaker to I-K

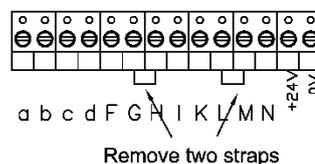


Do not connect any external equipment when the unit are energized

## 4 External loudspeaker, plugbox CD-7-VMP , VMP-530, VMP-503

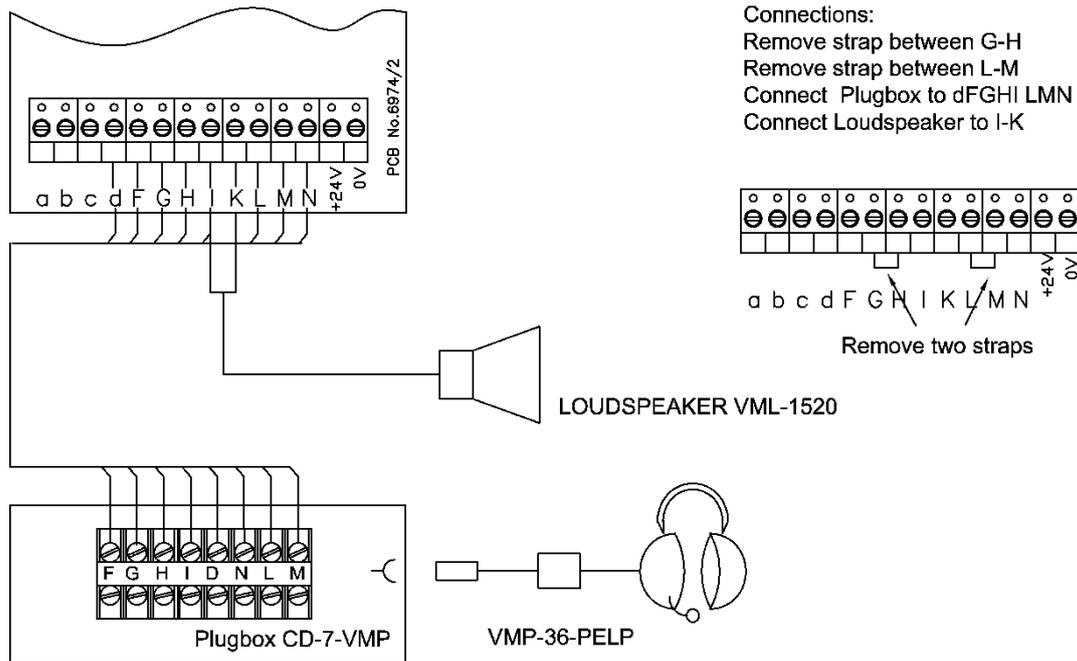

## 5 Privacy settings, all stations

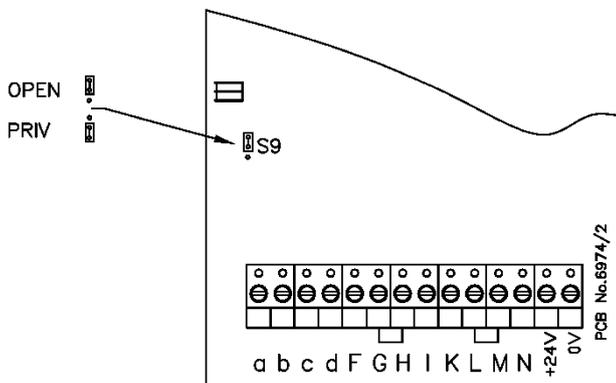

### Permanent Private Mode

The station should be set in permanent private mode by setting an internal strap S9 to the Private (PRIV) position. When the internal strap is set to the Private (PRIV) position, the station will still ring for incoming calls.

The internal strap is accessible from the top of the PCB No.6974/2. To set the internal switch to Private:

1. Default setting is OPEN
2. Move and set the strap in PRIV position