

User Information

Please notice that this unit shall not be used in Ex areas together with any equipment that cannot meet the requirements in the ATEX certificate and Directive 94/9/EEC


Connect the connector pins (1) into the output terminals X1 in the VSP-512 Ex Telephone according to VSP-Ex Installation & User Manual A100K11872.

Fasten the unit by steel clip in the clothing or where it may be convenient to operate. Plug the male jack from the headset into the receptacle jack 2) on the latching switch. Be sure of that the male plug is pressed to the bottom of the receptacle.

The latching switch is working in simplex mode. The toggle switch (3) has to be set to "ON" position for transmitting. To listen only, set the toggle switch to "OFF" position.

You may clean the PTT-unit by using a clean cloth or a cloth with water and ordinary soap. Alcohol may be used to disinfect the unit. Avoid dust, water and other pollutions to come into the receptacle jack (2). This area may be cleaned by ordinary cleansing spray for electronics added on a Q-tip. For additional information and spare parts, please contact Zenitel AS.

All repair and maintenance shall be performed by an Ex-approved workshop or by the manufacturer A-kabel

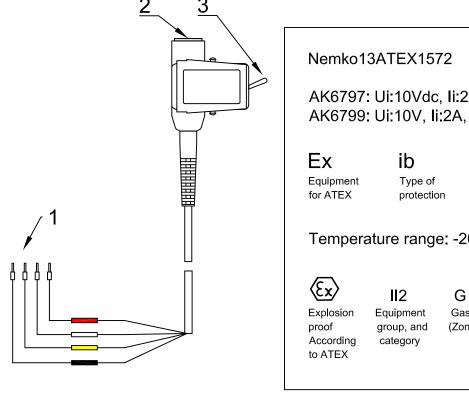

AK6797: Ui:10Vdc, Ii:2A, Ci:1,5nF, Li:2uH AK6799: Ui:10V, Ii:2A, Ci:3nF, Li:4uH IIC T4 Gas group Equipment protection level Temperature range: -20 to +40 degrees C **C €** 0470 Gb Equipment Nemko Gas (Zone) Protection level Notified Body ID