



## QUICK INSTALLATION & CONFIGURATION GUIDE

# ITSV-1

## IP Touch Station with Video


The ITSV-1 is a product developed for Zenitel Norway AS and is primarily used as part of a Zenitel Norway AS IP Intercom solution. The ITSV-1 is not pre-configured to support or carry emergency calls to any type of hospital, law enforcement agency, medical care unit ("Emergency Service(s)") or any other kind of Emergency Service. You must make additional arrangements to access Emergency Services. It is your responsibility to purchase SIP-compliant Internet telephone service, properly configure the ITSV-1 to use that service, and periodically test your configuration to confirm that it works as you expect. If you do not do so, it is your responsibility to purchase traditional wireless or landline telephone services to access Emergency Services.

ZENITEL NORWAY DOES NOT PROVIDE CONNECTIONS TO EMERGENCY SERVICES VIA THE ITSV-1. NEITHER ZENITEL NORWAY NOR ITS OFFICERS, EMPLOYEES OR AFFILIATES MAY BE HELD LIABLE FOR ANY CLAIM, DAMAGE, OR LOSS. YOU HEREBY WAIVE ANY AND ALL SUCH CLAIMS OR CAUSES OF ACTION ARISING FROM OR RELATING TO YOUR INABILITY TO USE THE ITSV-1 TO CONTACT EMERGENCY SERVICES, AND YOUR FAILURE TO MAKE ADDITIONAL ARRANGEMENTS TO ACCESS EMERGENCY SERVICES IN ACCORDANCE WITH THE IMMEDIATELY PRECEDING PARAGRAPH.

## Precautions

**Warning:** Please DO NOT power cycle the ITSV-1 during system boot-up or firmware upgrade. You may corrupt firmware images and cause the unit to malfunction.


## Package Contents

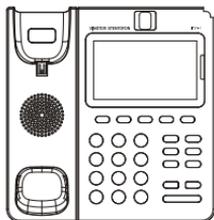

1 X ITSV-1 Main Case



1 X Handset

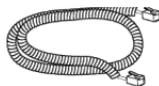

1 X Phone Cord




1 X Ethernet Cable




1 X Screen  
Cleaning Cloth



1 X Phone Stand

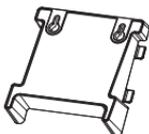

1 X Wall Mount

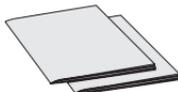


1 X Quick Installation Guide /  
1 X GPL License

## Overview

- ITSV-1 Touch Station with Video (Item Number: 1490001010)


ITSV-1 represents the future in IP Intercom Services, featuring Android™ Operating System 4.2, a 4.3" (480x272) capacitive touch screen, a tiltable 1 megapixel CMOS camera, dual Gigabit network ports, integrated Wi-Fi, PoE and Bluetooth. The ITSV-1 delivers superior HD audio & video, leading edge SIP intercom features and integration with the IC-EDGE and ICX-AlphaCom IP Intercom Platforms, developed by Zenitel Norway AS. ITSV-1 redefines the desktop communication experience with a raised level of innovation and integration of state-of-the-art real-time video conferencing, and personalized rich media presentation & delivery.

## Phone Setup

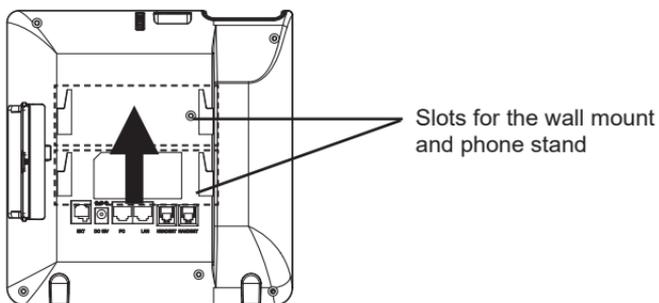

### Installing the Phone with Wall Mount:

1. Attach the wall mount to the slots on the back of the phone.
2. Attach the phone to the wall via the wall mount hole.
3. Pull out the tab from the handset cradle (see figure below).
4. Rotate the tab and plug it back into the slot with the extension up to hold the handset while the phone is mounted on the wall.

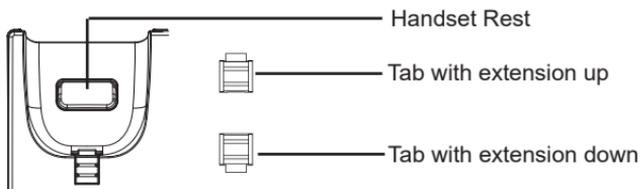


## Installing the Phone with Phone Stand:


Attach the phone stand to the back of the phone where there are slots for mounting. The upper and bottom slots enable mounting at two different angles.

## Connecting the Phone

1. Connect the handset and main phone case with the phone cord.
2. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable.
3. If you have a compatible power adapter, connect the 12V DC output plug to the power jack on the phone; plug the power adapter into an electrical outlet. (If PoE switch is used in step 2, this step could be skipped.)
4. The LCD will display booting up or firmware upgrading information. Before continuing, please wait for the main screen display to appear.
5. Using the web configuration interface or the menu of the touch screen, you can further configure network connection using static IP, DHCP, etc.

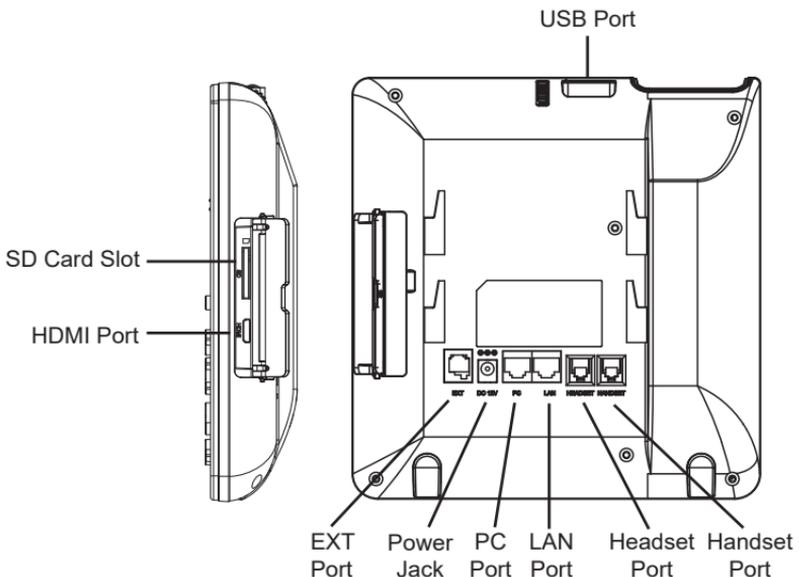

## Tips for Using the Keypad:

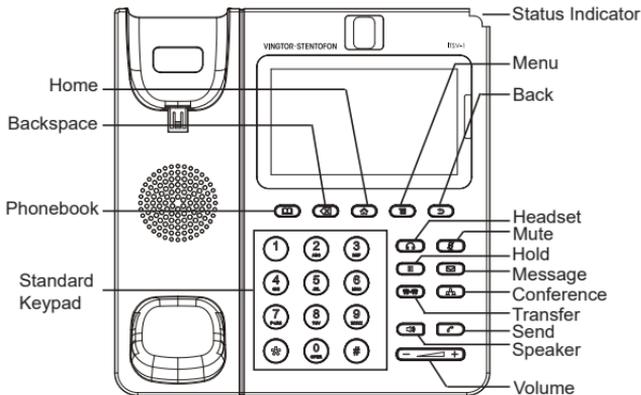

## Phone Configuration

- For further information on the configuration of ICX-AlphaCom, SIP, and IC-EDGE, please see [Zenitel Wiki](#).



## Configuring the ITSV-1 Using Touch Screen:


- Make sure the phone is properly powered up, in idle screen and connected to the network.
- Tap the **Applications** icon on the LCD to access ITSV-1's applications and settings.
- If Ethernet is not enabled, go to **Settings > Wireless & Network > Ethernet Settings** and put **Different Networks for Data and VoIP Calls** to **ON**.
- Select **Settings > Advanced Settings > Account**. Tap on one of the Accounts to configure **Account Name**, **SIP Server** (ICX-AlphaCom or IC-EDGE), **SIP User ID** (Extension Number), **SIP Authentication ID** (if required) and **SIP Authentication Password** (if required).

**Note:** For changes to take effect, it may be necessary to temporarily disable the account. Do this by setting **Account Activation** to **OFF** and selecting **OK**. Then re-enable your account by setting **Account Activation** to **ON** and selecting **OK**.


- Follow the LCD menu options to configure other settings on the phone. For example, to configure static IP on the ITSV-1, set up static IP address via LCD menu **Settings > Wireless & Network > Ethernet Settings**.
- If you want to see your accounts on your home screen as below, return to the home screen (press **Home** button). Press the **Menu** button, and select **Edit Widgets**. Several account display widgets will appear. Select and drag the widget to the home screen.

## Configuring the ITSV-1 Using Web Browser:

1. Ensure your phone is properly powered up and connected to the Internet.
2. To find the IP address of the phone, use the touch screen and tap **Settings** > **About Phone** and scroll down to **Network Status**.
3. Enter the phone's IP address in your PC's browser.
4. Log in by entering the default username: **admin** and password: **alphaadmin**

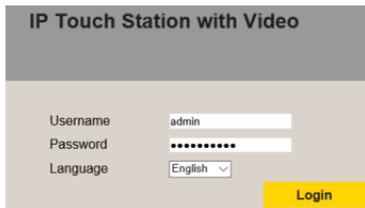

5. To register the account on the ITSV-1:
  - Select **Account** > **Account 1/2/3/4/5/6** > **General Settings**
6. Configure **Account Name**, **SIP Server** (ICX-AlphaCom or IC-EDGE), **SIP User ID** (Extension Number), **SIP Authentication ID** (if required) and **SIP Authentication Password** (if required).

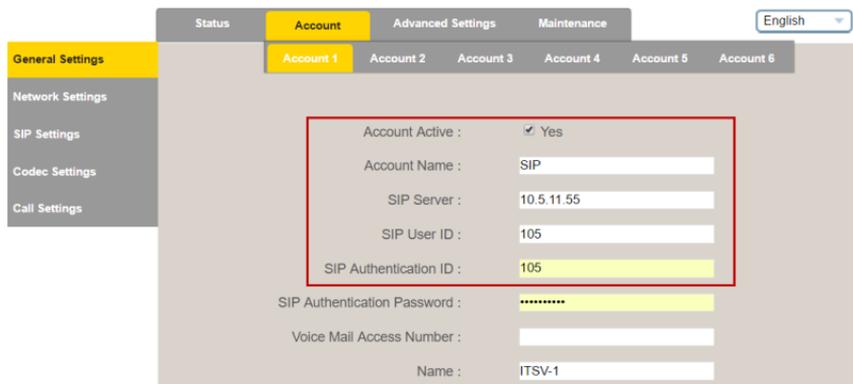

**Note:** For changes to take effect, it may be necessary to temporarily disable the account. First uncheck the **Yes** box for **Account Active**, then click **Save and Apply** (button appears in yellow bar at top of browser). Once this is done, re-enable the account by checking the **Yes** box for **Account Active** followed by **Save and Apply** again.

The following sections describes how the ITSV-1 is configured to work together with the Turbine Video Intercom TCIV-2/TCIV-3/TCIV-5/TCIV-6.

## ICX-AlphaCom Configuration

- Log into the ITSV-1 by entering default username: **admin** and password: **alphaadmin**

### ICX-AlphaCom ITSV-1 Account Setup:

- Select **Account > Account 1 > General Settings**

The screenshot shows the 'General Settings' page for 'Account 1'. The 'Account Active' checkbox is checked. The 'Account Name' is 'AlphaCom', 'SIP Server' is '10.5.101.40', 'SIP User ID' is '200', and 'SIP Authentication ID' is '200'. Other fields include 'SIP Authentication Password', 'Voice Mail Access Number', 'Name' (ITSV-1), and 'Show Account Name Only' (unchecked).

- Enter the values shown above for the parameters

**Account Active:** Check **Yes** box

**SIP Server:** IP address of **ICX-AlphaCom** (see **Main Settings** in TCIV)

**SIP User ID:** Directory Number of **ITSV-1** phone

**SIP Authentication ID:** Same as SIP User ID

### ICX-AlphaCom ITSV-1 Audio Codec Settings:

- Check in AlphaPro under **Users & Stations** the codec that has been selected for the SIP phone (normally **G722**)
- Select **Account 1 > Codec Settings**

The screenshot shows the 'Codec Settings' page for 'Account 1'. The 'DTMF' section has 'In audio' unchecked, 'RFC2833' checked, and 'SIP INFO' checked. 'DTMF Payload Type' is '101'. The 'Preferred Vocoder' section shows 'Available' with 'PCMA' and 'PCMU' options, and a 'Selected' dropdown menu with 'G722' selected.

- Remove all codecs from the **Selected** list except the one defined in AlphaPro, i.e. **G722**.

## ICX-AlphaCom ITSV-1 Video Configuration:

The video is streamed in MJPEG format directly from the TCIV camera to the ITSV-1. The TCIV camera must have a static IP address.

- Select **Account 1 > Call Settings**

Network Settings

SIP Settings

Codec Settings

**Call Settings**

Start Video Automatically :  Yes

Video Layout : Default

Remote Video Request : Prompt

Disable Presentation :  Yes

Dial Plan Prefix :

Disable DialPlan :  Dial Page  Contact  
 Incoming Call History  Outgoing Call History  
 MPK & Click2Dial

DialPlan : {x+ | +x+ | \*x+ | \*xx\*x+ | x+\*x\*x+}

Refer-To Use Target Contact :  Yes

Auto Answer : No

Intercom Barging :  Yes

Auto Preview :  Yes

Send Anonymous :  Yes

Anonymous Call Rejection :  Yes

Call Log : Log All

Special Feature : Vingtor Stentofon System

Configure Door System : Configure

- Click the **Yes** box for **Start Video Automatically**
- Select **Vingtor Stentofon System** from **Special Feature** dropdown box
- Click **Configure** to open the camera list

Start Video Automatically :  Yes

	Door System URL	Door System SIP User ID
1 :	http://10.5.101.46:8090/mjpg/video	2222
2 :		

- Enter the camera URL and the directory number of the TCIV station

**Door System URL** : http://< TCIV camera IP address>:<port no.>/mjpg/video.mjpg

Example: **http://10.5.101.46:8090/mjpg/video.mjpg**

**Door System SIP User ID** : Directory Number of TCIV station

## IC-EDGE Configuration

The ITSV-1 has to be manually added to the Edge Controller.

- Log on to the Edge Controller
- Select **Edge Controller > System Configuration > Directory**
- Under **Manually Added Devices** click the **+** button to select **Vingtor-Stentofon Device** from the dropdown list

For further information on the configuration of IC-EDGE, please see [wiki.zenitel.com/wiki/ITSV-1\\_\(Edge\)](http://wiki.zenitel.com/wiki/ITSV-1_(Edge))

- Log into the ITSV-1 by entering default username: **admin** and password: **alphaadmin**

### IC-EDGE ITSV-1 Account Setup:

- Select **Account > Account 1 > General Settings**

The screenshot shows the 'General Settings' page for 'Account 1'. The 'Account Active' checkbox is checked 'Yes'. The 'Account Name' is 'Reception', 'SIP Server' is '10.9.8.7', 'SIP User ID' is '300', and 'SIP Authentication ID' is '300'. The 'SIP Authentication Password' and 'Voice Mail Access Number' fields are empty. The 'Name' field is 'Reception'.

- Enter the values shown above for the parameters  
**Account Active:** Check **Yes** box  
**SIP Server:** IP address of intercom station set as **Edge Controller**  
**SIP User ID:** Directory Number of the **ITSV-1** phone  
**SIP Authentication ID:** Same as SIP User ID

### IC-EDGE ITSV-1 Video Configuration:

The video is streamed directly from the TCIV camera to the ITSV-1. The TCIV camera must have a static IP address.

- Select **Account 1 > Call Settings**

The screenshot shows the 'Call Settings' page for 'Account 1'. The 'Start Video Automatically' checkbox is checked 'Yes'. The 'Video Layout' is set to 'Default' and the 'Remote Video Request' is set to 'Prompt'.

- Check the **Yes** box for **Start Video Automatically**

## IC-EDGE Group Call:

The Edge Controller transmits group call audio using IP multicast technology. Each group call uses its own unique multicast IP address. To find the multicast IP address:

- Log into the Edge Controller
- Select **Edge Controller > Group Calls**

Main **Edge Controller**

System Overview  
System Configuration  
Device Profiles  
**Group Calls**  
Software Upgrade  
Licensing

### Group Call 1 - All call

Description	Configuration
Nickname	All call
Number	84
Answer Group Call	<input checked="" type="checkbox"/>
Answer Timeout	30
Priority	EMERGENCY
Chime	dingdong.wav
Add all devices	<input type="checkbox"/>
Devices in group	<input checked="" type="checkbox"/> 101 TCIS-2 <input checked="" type="checkbox"/> 103 TCIV-6 <input checked="" type="checkbox"/> 104 TMIS-1 <input checked="" type="checkbox"/> 105 IP DeskMaster
Group Audio Address	239.195.40.64:61060

Note the multicast addresses in **Group Audio Address** under Group Calls 1-4.

- Log into the ITSV-1
- Select **Advanced Settings > Multicast Paging**

Video Settings  
Tone Generator  
**Multicast Paging**  
GDS Settings  
MPK General Settings  
MPK LCD Settings  
MPK EXT1 Settings  
MPK EXT2 Settings  
MPK EXT3 Settings  
MPK EXT4 Settings

Paging Barge: Disable

Paging Priority Active:  Yes

Multicast Paging Codec: **G722**

Enable Multicast Paging Video:  Yes

Multicast Paging Video Codec: H 264

Multicast Paging Image Size: VGA

Multicast Paging Video Bit Rate: 256 kbps

Multicast Paging Video Frame Rate: 15 frames/second

Multicast Paging H.264 Profile Type: Baseline Profile

Multicast Paging H.264 Payload Type: 99

Multicast Listening

Priority	Listening Address	Label
1	239.195.40.64:61060	All Call
2	239.195.40.65:61062	Group Call 1
3	239.195.40.66:61064	Group Call 2
4	239.195.40.67:61066	Group Call 3

- Set **Multicast Paging Codec = G722**
- Enter the multicast addresses under **Listening Address**
- Click **Save** and **Reboot** the ITSV-1

When a Group Call is activated, the ITSV-1 will automatically broadcast the audio in the loudspeaker. The ITSV-1 will display the text of the Group Call as entered under **Label**. If the ITSV-1 is busy in a regular call when a Group Call is made, it will by default not play the Group Call audio. If **Paging Barge** is set to value **2** or higher, the current call will be placed On Hold, and the Group Call audio will be broadcast. When the Group Call is ended, press the Hold button to resume the regular call.

Zenitel Norway AS  
Sandakerveien 24c  
0403 Oslo, Norway



**WE HAVE 24/7  
CUSTOMER  
SERVICE**

**GLOBAL: +47 4000 2700**  
**USA: 800 654 3140**  
Mon-Fri 09:00 to 17:00 CST

**cs@zenitel.com**

\*Android is a Registered Trademark of Google, Inc.

**HDMI**

<sup>TM</sup> HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



For Warranty and RMA information, please visit [www.zenitel.com](http://www.zenitel.com)

DOC NUMBER

**A100K11705**

June 2020

[customer.service@zenitel.com](mailto:customer.service@zenitel.com)

