## **VINGTOR** STENTOFON

### **VAF-1 Analog Telephone Installation Guide**

Item Number	Item Name	Description
2213000300	VAF-1	Analog Flush Telephone w/Relay

#### 1 VAF-1 Overview




Figure 1: Top View - VAF-1

Figure 2: Rear View w/ cover

Figure 3: Rear View w/o cover

#### 2 Mounting

Cut out 248 x 138mm in console and mount the VAF-1 with four M4 counter sunk screws.

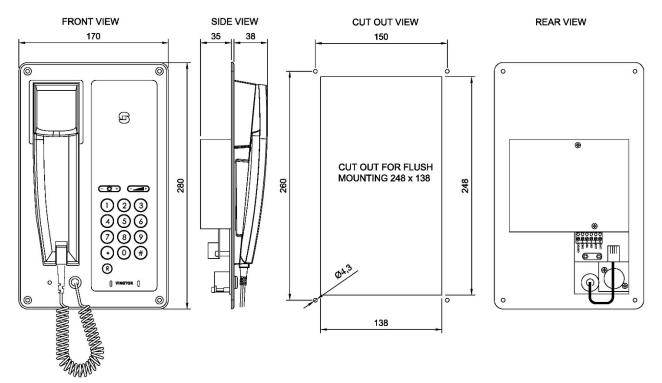




#### 3 Connecting the Terminals



Make sure that the cables have a necessary length for maintenance.

Ref. Figure 2, (9-10)

- 1. Thread the cable (s) through the cable clamp(10), and tighten with the two screws
- Connect the telephone line, twisted cable and 24 VDC to the terminal block (9) (For back light only)
- "Relay contact Pot.Free" = Optional for extra signal device (Current limit 170mA)

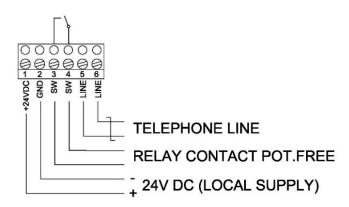


# 4 Set Recall button Timing, Dialing type, Ringer frequency, and System modus



Flash time default is 100ms.

- Set Recall button timing by using dipswitch SW1 Pin 1 & 2
- Set Dialing type by using dipswitch SW1 Pin 3
- 3. Set Ringer frequency by using dipswitch SW1 Pin 4
- 4. Set jumper J2 in position ACM for AlphaCom system modus
- Set jumper J2 in position N for PBX system modus

3, (11)
---------

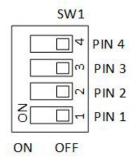

Ref.Figure 3, (12)



Recall button timing			Dialing type		Ringer frequency	
Pin 1	Pin 2	Timing	Pin 3		Pin 4	
OFF	OFF	30ms	ON	Pulse	ON	Ringer frequency HIGH
ON	OFF	60ms	OFF	DTMF	OFF	Ringer frequency LOW
OFF	ON	100ms	-	-	-	-
ON	ON	150ms	-	-	-	-

DOC NO.

A100K11770

02.08.201

customer.service@zenitel.com

