

MODIFICATION DESCRIPTION

When using the headsets VMP-36-PEL-A and VMP-36-PELP-A together with VMP stations **VMP-503** and **VMP-530** a “Modification cable kit with diode for VMP-stations” – pn 3005020067 needs to be added to the station to avoid disturbing oscillations (howling).

Follow the instructions below:

1. **Turn off the power to the complete system**
2. Open the unit
3. Unplug the internal microphone (pluggable) from the PCB – See the picture 1 below
4. Insert the Modification cable kit (Make sure colour codes and connector polarity is consisting with the existing microphone and connector (red-to-red /yellow-to-yellow) – See Picture 1/Figure 2 below
5. Reconnect the internal microphone/Microphone cable kit with diode for VMP stations to the PCB
6. Connect the headset
7. Close the unit
8. **Turn the system power on again**

Picture 1:

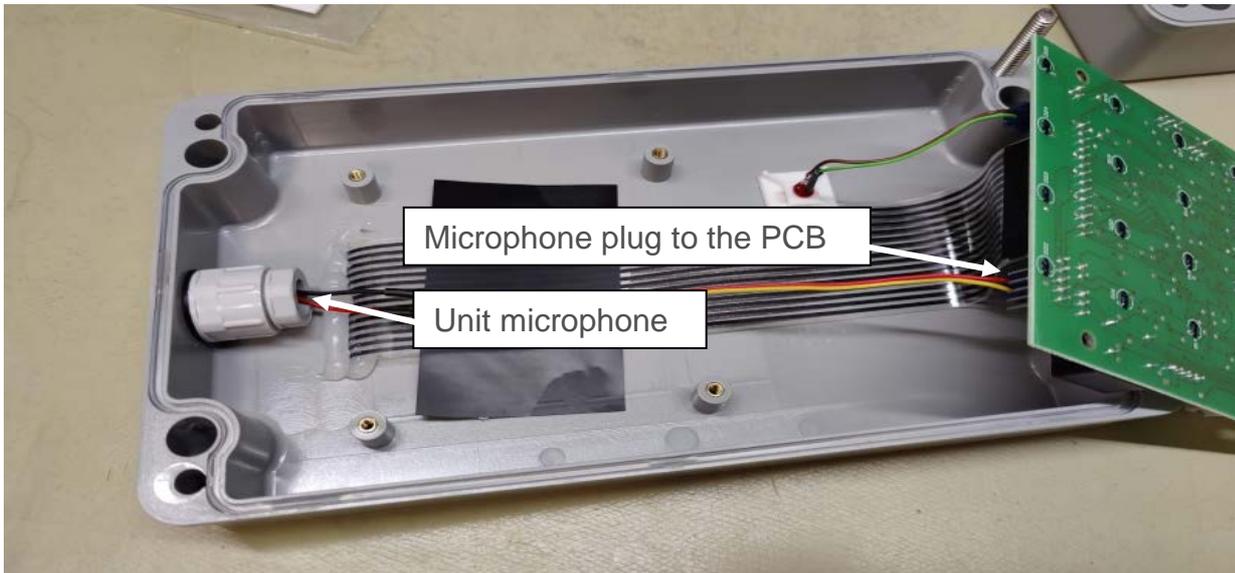


Figure 2:

